User Guide of the Test Box B

Updated: 2025.10.10

1. Image Setting to SD Card

1. **Do Not delete** the “480_960_ST7701s_2LANE_boe318” and “YFX_SD_LOAD” in SD card
2. Image resolution: **the resolution of the display**, for this sample is 480x960;
3. Image Format: **bmp**
4. Replace image: use numbers such as 1, 2, 3... for naming, and the order of display images is according to the name. (the total quantity is set before ship and cannot be changed at customer end, the total quantity is set of **10** images by default which can be read from the SD card.)

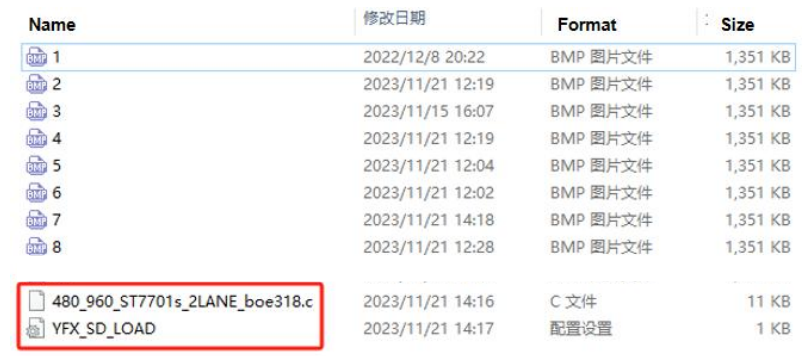

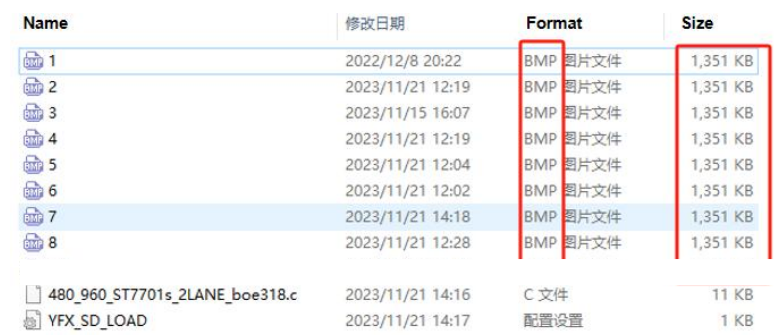

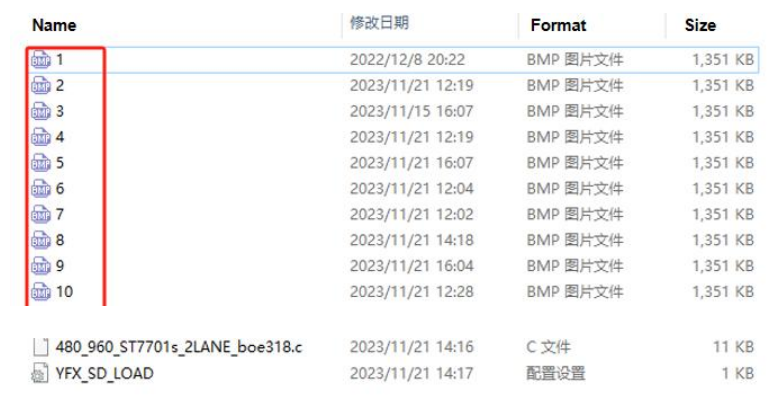

2. Operation of Test Box

Connection :

1. Display connect to the MIPI interface AD board;
2. Plug in the 12V power supply to the test box.

(the 12V power supply is **not** included, given that different international plug standards vary from country to country)

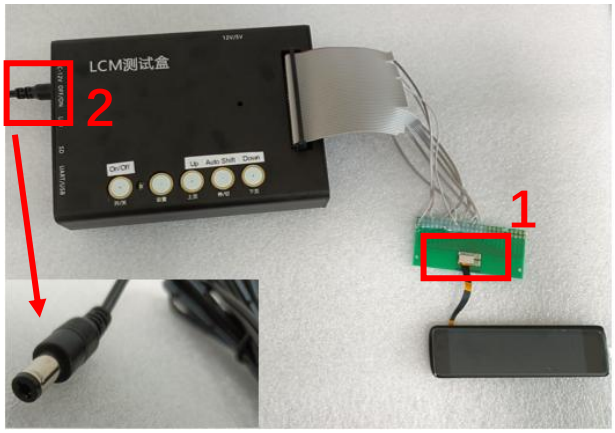

Operation:
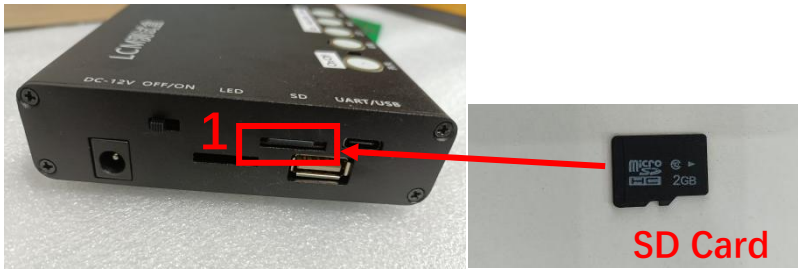
1) Put SD card in to the slot;
2) Turn the switch "OFF/ON" for box power off/on;
3) Press the “On/Off ” to start the display;
4) Press
   "Up" for last image,
   “Down” for next,
   "Auto Shift" for images auto-play.